

CONTENTS

- Receiving Procedures
- Warranty
- Safety Information
- Description
- Assembly Instructions
- Maintenance
- Parts List and Diagram

Receiving Procedures

Every Morse drum handler is inspected prior to shipping. However, damage may be incurred during transit.

- Check for visible damage. If you choose to accept damaged freight, always sign noting the damage on the **BILL OF LADING**.
- Document the damage and have the truck driver sign. We recommend keeping a digital camera at your receiving dock for this purpose.
- Open packages expeditiously to check the condition of the goods. There is only a 24 hour window to notify the carrier of any concealed damage.
- **IMMEDIATELY REPORT ALL DAMAGE TO THE SHIPPING COMPANY!** Then you may contact Morse for assistance with your freight claim.
- Morse Manufacturing will not be held responsible for any damaged freight that is not signed for as damaged.

Delivery to non-business addresses without a loading dock result in additional freight charges. Residential delivery fees, inside delivery fees, re-delivery charges, and lift gate services will be added by the truck line, and are non-negotiable.

Limited 2 Year Warranty

Morse drum handling equipment is guaranteed against defects in workmanship or materials for **TWO YEARS** when used properly within its rated capacity. Warranty does not cover wear from normal use or damage from accident or abuse. Motors and other purchased parts carry the warranties of their manufacturers.



For warranty claims, contact your Morse Dealer to obtain a return authorization number, and for return freight advice. Return freight must be prepaid.

In all instances, liability is limited to the purchase price paid or to repairing or replacing the product. Customer assumes liability for any modifications, unauthorized repairs or parts substitution.

Safety Information

While Morse Manufacturing Co. drum handling equipment is engineered for safety and efficiency, a high degree of responsibility must be placed upon the machine operator to follow safe practices, based primarily on common sense, upon which true safety depends.

Failure to follow the safety precautions in this manual can result in personal injury or property damage. Observe the same precautions as with similar machinery where carelessness in operating or maintenance is hazardous to personnel. Carefully read the safety precautions below and throughout this manual.

Review the Material Safety Data Sheet(s) for the material(s) in the drum(s) and take all necessary precautions. Safety shoes, work gloves, hard hat and other personal protective devices are recommended.

Prior to initial use, inspect all moving parts. Perform necessary load test, inspections, operator training, etc.



DANGER - Indicates a situation which, if not avoided, will result in serious injury or death. This signal word is limited to the most extreme situations.



WARNING - Indicates a situation which, if not avoided, could result in serious injury or death.



CAUTION - Indicates a situation which, if not avoided, can result in damage to the machine.

	WARNING - DO NOT make alterations or modify the unit. Under no circumstances should any modifications be made to the Morse machinery without factory authorization. Any modifications may void the warranty. This machine was designed to perform a specific job and alterations may result in injury to operator or machine.
	WARNING - DO NOT exceed the weight capacity of 75 Lb. (34 kg).
	WARNING - DO NOT operate damaged or malfunctioning unit, or a unit with missing parts.
	WARNING - DO NOT operate without first having read and understood operating manual.
	WARNING – No Loose Fitting Clothing. Wear close-fitting clothing and safety equipment appropriate to the job. Loose fitting clothing may become caught on the machinery and cause severe personal injury.
	WARNING - Wear safety shoes with non-slip soles and hard toe protection.
	WARNING - This product can expose you to chemicals including barium sulfate, cobalt, titanium dioxide, and 2-methylimidazole, which are known to the State of California to cause cancer, and bisphenol-A, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

Description

Model 2-15 Double Can Tipper is designed to handle one or two 5-gallon (19 liter) steel or plastic cans or pails. Each up to 12.25" (31.2 cm) in diameter and 10" to 19" (25.4 to 48.3 cm) tall.

Dispense from ONE can at a time.

The maximum capacity is 75 Lb. (34 kg) per can.



Assembly Instructions

1. Unpack and identify the following parts:
 - 2 - Can holders with catches
 - 1 - Base Assembly
 - 1 - Center Brace
 - 2 - Side braces (left and right)
 - 4 - 1/4-20 x 5/8 Panhead screws
 - 8- 1/4-20 Two way lock nuts
 - 4 - 1/4-20 x 3/4 Hex head cap screws
2. Spread base assembly open, hinging at base riveted joints.
3. Align side braces and center brace with center hole in base. Note: Ensure left and right side braces are on correct sides with holes for lower can holder pivot points 17-1/2" high.
4. Fasten braces to base using two 1/4-20 x 3/4 hex head cap screws and 1/4-20 lock nuts.
5. Attach center brace to rear uprights of base with 1/4-20 x 5/8 panhead screws (item 6) and 1/4-20 lock nuts.
6. Place bottom can holder between side braces as shown. Insert 1/4-20 x 3/4 hex head cap screws from inside of loop through holes in can holder ring, side braces and rear brace uprights. Thread 1/4-20 lock nuts onto screws but do not tighten completely. Nuts should be just loose enough to allow can holder to pivot freely.
7. Place top can holder between side braces. Fasten with 1/4-20 x 5/8 panhead screws and 1/4-20 lock nuts allowing can holder to pivot freely as on step 6.
8. Place a few drops of oil on pivot screws before using, and periodically, to minimize wear.

Maintenance

Periodically inspect all moving parts, framework, and contact areas for signs of wear, fatigue, or loosening.