



Kit, Rim Clamp Assembly, Spark Resistant

# Operator's Manual for Morse Rim Clamp Assembly Kit with Spark Resistant Parts Part # 4560M-P

Serial Number 0711 to 0516 (MMYY)

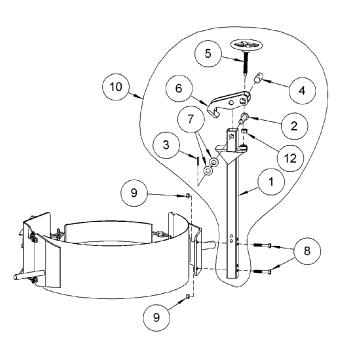

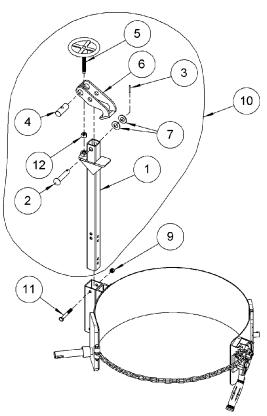

### INSTALLATION INSTRUCTIONS

### for MORcinch Drum Holder

- 1. Attach Rim Clamp Assembly (item 10) to drum holder bracket.
- 2. Line up rim clamp with holes of drum holder bracket.
- 3. Bolt in place using 2 bolts (item 8) and 2 nuts (item 9).

## INSTALLATION INSTRUCTIONS

for Drum Holder with Socket Tube

- 1. Slide Rim Clamp Assembly (item 10) down through socket tube, and line up top holes in Rim Clamp Assembly with top holes of socket tube.
- 2. Use bolt (item 11) and nut (item 9) to bolt in place through the top holes of the socket tube and the Rim Clamp Assembly.

ITEM	QTY	PART #	DESCRIPTION
1	1	4558M-P	WELD, RIM CLAMP, SR
2	1	138-P	CLEVIS PIN 5/8 X 3"
3	1	64-P	ROLL PIN, 3/16 X 1-1/4
4	1	3510-P	THREADED BARREL, RIM CLAMP
5	1	3616-P	HANDWHEEL ASM, 4", 185R
6	1	3239M-P	TOP JAW, RIM CLAMP, WELD, SR
7	2	17-P	WASHER, 5/8 SAE FL 1-5/16 O
8	2	82-P	HHCS, 3/8-16 X 2-1/4 GR2
9	2	1169-P	NUT, 3/8-16 REV HEX LOCK
10	1	4557M-P	ASM, RIM CLAMP, SCREW, SR
11	1	1315-P	HHCS, 3/8-16 X 2-3/4 GR2
12	1	810-P	NUT, 1/2-13 REV HEX LOCK

morsedrum.com

service@morsedrum.com



727 West Manlius St. East Syracuse, NY, 13057 USA

Copyright 2018 - Morse Mfg. Co., Inc.



# Kit # 4560M-P

Kit, Rim Clamp Assembly, Spark Resistant

## Operator's Manual for Morse Rim Clamp Assembly Kit with Spark Resistant Parts Part # 4560M-P Serial Number 0711 to \_\_\_\_ (MMYY)

**OPERATING INSTRUCTIONS** 

#### TO SECURE DRUM:

- 1. Turn hand wheel (item 5) counter clockwise to open top jaw (item 6).
- 2. Position drum holder assembly with bottom jaw of rim clamp directly under top rim of drum.
- 3. Turn hand wheel clockwise until top jaw is pressing tightly against top of drum (see Figure 1).
- 4. Secure drum with chain and ratchet mechanism. Drum is now ready to be lifted and tilted.

#### TO RELEASE DRUM:

- 1. Lower drum to floor in an upright position.
- 2. Release chain from ratchet mechanism by applying pressure to ratchet handle in a clockwise direction with one hand and opening pawl to free ratchet with other hand. Remove chain link from ratchet.
- 3. Open rim clamp by turning hand wheel counter clockwise.

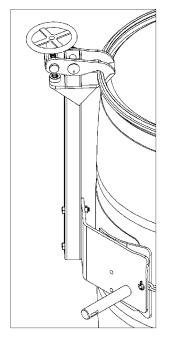


Figure 1 Plastic drum being lifted with part number 4560M-P Rim Clamp Assembly Kit installed.



WARNING: This product can expose you to chemicals including cobalt, titanium dioxide, and 2-methylimidazole, which are known to the State of California to cause cancer, and bisphenol-A, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov