

Kit POLY-201

Kit to Roll Plastic Drum on Wheeled 201 Series Serial Number 286584 to Current



Morse Portable Drum Roller shown with Kit POLY-201FI Installed

Installation Instructions

Idler Shaft Assembly

Add two wheels to the end closest to the loading plate and tighten in place.

Drive Shaft Assembly

- 1. Before you begin, mark the frame at all three pillow block bearing bases to locate factory set positions
- 2. Remove drive sprocket cover
- 3. Remove the six pillow block bearing bolts.
- 4. Remove master link from drive roller chain and take chain off sprocket.
- 5. Remove drive shaft assembly and repeat wheel install procedure from above.
- 6. Set the drive shaft assembly on the frame into the position where the frame was marked.
- 7. Install all bearing mounting bolts and hand tighten the nuts, except the outside bolts on the two bearings where the back stop tube assembly will be mounted (see diagram).
- 8. Reinstall drive roller chain.
- 9. Insert the back stop tube as shown, and secure with 3/8-16 x 1-1/2". bolts provided in kit. These should be hand tight at this point. The holes on the 201 channel frame may need to be drilled out a little larger, in order to line up the holes of the back stop tube.
- 10. While ensuring that the drive roller chain is tight, tighten the bearing bolts. The bearings should be at the factory positions that were marked on the frame.
- 11. Install drive sprocket cover.




Kit POLY-201

Kit to Roll Plastic Drum on Wheeled 201 Series

Serial Number 286584 to Current

Final Assembly

- 1. Insert loading chain eye bolt in blank hole on idler side as shown. Secure with two nuts and two washers.
- 2. Adjust all wheels and tighten all set screws.

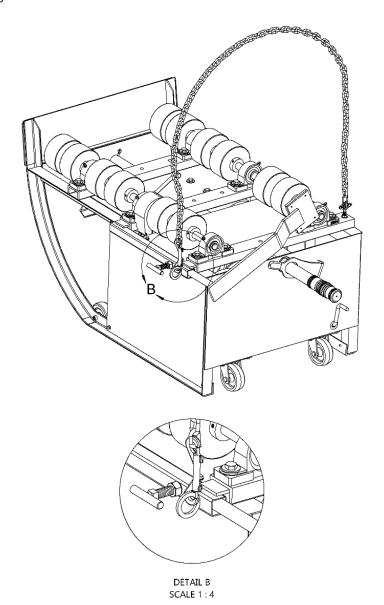


Copyright – Morse Mfg. Co., Inc.



Kit POLY-201

Kit to Roll Plastic Drum on Wheeled 201 Series Serial Number 286584 to Current

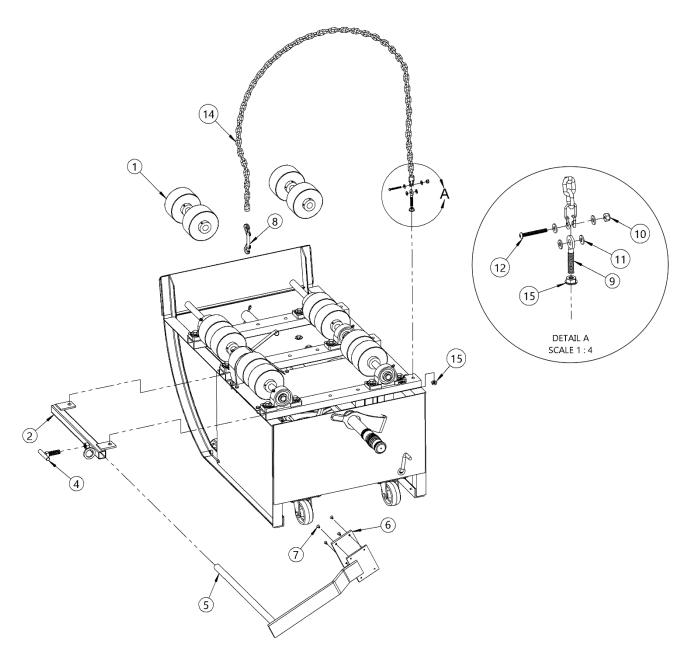

ITEM	QTY.	PART NUMBER	DESCRIPTION
1	4	202-P	WHEEL, DRIVE OR IDLER, 4", 201
2	1	3499-P	BACK STOP TUBE WELD, 201
4	1	1372-P	TEE HANDLE, BRACKET ASM, 1-1/2
5	1	5957-P	LEVER WELD, BACK STOP POLY-201
6	1	327-P	WEAR PAD, UHMW, TIVAR, 201B
7	4	248-P	FHMS, 10-24 X 3/8
8	1	575-P	SNAP HOOK, GR, 300
9	1	M01327-P	BOLT, 5/16-18 X 1-7/8 EYE, MON
10	1	5581-P	NUT, 10-32 NYLON LOCK NUT



Kit to Roll Plastic Drum on Wheeled 201 Series

Serial Number 286584 to Current

11	4	3292-P	WASHER, SAE 10 7/32 ID 1/2 OD
12	1	5580-P	BHCS, 10-24 X 1-3/4
14	1	3988-P	CHAIN, 1/0 LOCK LINK, 66"
15	2	1634-P	NUT, 5/16-18 WHIZ LOCK