



# Kit # 4560SS-P

Kit, Rim Clamp Assembly, Stainless Steel

# Operator's Manual for Morse Stainless Steel Rim Clamp Assembly Kit Part # 4560SS-P

Serial Number 0711 to 0416 (MMYY)

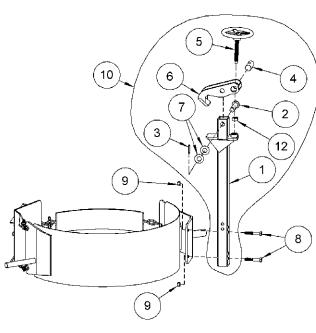

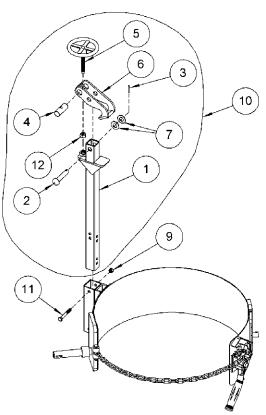

### INSTALLATION INSTRUCTIONS

### for MORcinch Drum Holder

- 1. Attach Rim Clamp Assembly (item 10) to drum holder bracket.
- 2. Line up rim clamp with holes of drum holder bracket.
- 3. Bolt in place using 2 bolts (item 8) and 2 nuts (item 9).

### INSTALLATION INSTRUCTIONS

for Drum Holder with Socket Tube

- 1. Slide Rim Clamp Assembly (item 10) down through socket tube, and line up top holes in Rim Clamp Assembly with top holes of socket tube.
- 2. Use bolt (item 11) and nut (item 9) to bolt in place through the top holes of the socket tube and the Rim Clamp Assembly.

ITEM	QTY	PART #	DESCRIPTION
1	1	4558SS-P	WELD, RIM CLAMP, SR
2	1	138SS-P	CLEVIS PI, 400 SS
3	1	64SS-P	ROLL PIN, 3/16 X 1-1/4, SS
4	1	3510SS-P	THREADED BARREL, RIM CLAMP, SS
5	1	3616-P	HANDWHEEL ASM, 4", 185R
6	1	3239SS-P	TOP JAW, RIM CLAMP, WELD, SS
7	2	17SS-P	WASHER, 5/8 SAE 1-5/16 OD, SS
8	2	82SS-P	HHCS, 3/8-16 X 2-1/4, SS
9	2	3981SS-P	NUT, 3/8-16 NYLON LOCK, SS
10	1	4557SS-P	ASM, RIM CLAMP, SCREW, SS
11	1	1315SS-P	HHCS, 3/8-16 X 2-3/4 GR2 SS
12	1	810SS-P	NUT, 1/2-13 NYLON LOCK, SS

MORSE Mfg. Co., Inc.•727 West Manlius Street•P.O. Box 518•East Syracuse, NY 13057-0518Phone: (315) 437-8475•Fax: (315) 437-1029•Email: service@MorseDrum.com•Website: MorseDrum.com

Copyright 2016 - Morse Mfg. Co., Inc.



# Kit # 4560SS-P

Kit, Rim Clamp Assembly, Stainless Steel

## Operator's Manual for Morse Stainless Steel Rim Clamp Assembly Kit Part # 4560SS-P Serial Number 0711 to 0416 (MMYY)

#### **OPERATING INSTRUCTIONS**

#### TO SECURE DRUM:

- 1. Turn hand wheel (item 5) counter clockwise to open top jaw (item 6).
- 2. Position drum holder assembly with bottom jaw of rim clamp directly under top rim of drum.
- 3. Turn hand wheel clockwise until top jaw is pressing tightly against top of drum (see Figure 1).
- 4. Secure drum with chain and ratchet mechanism. Drum is now ready to be lifted and tilted.

#### TO RELEASE DRUM:

- 1. Lower drum to floor in an upright position.
- 2. Release chain from ratchet mechanism by applying pressure to ratchet handle in a clockwise direction with one hand and opening pawl to free ratchet with other hand. Remove chain link from ratchet.
- 3. Open rim clamp by turning hand wheel counter clockwise.

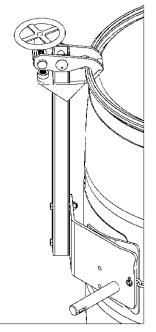


Figure 1 Plastic drum being lifted with part number 4560SS-P Rim Clamp Assembly Kit installed.