

## Automated Tilt-To-Load Drum Tumblers Serial Number 315601 to Current

### **CONTENTS**

- Receiving Procedures
- Warranty
- Safety Information
- Machine Description
- Installation Instructions
- Operating Instructions
- Maintenance



Every Morse drum handler is inspected prior to shipping. However, damage may be incurred during transit.

- Check for visible damage. If you choose to accept damaged freight, always sign noting the damage on the BILL OF LADING.
- Document the damage and have the truck driver sign. We recommend keeping a digital camera at your receiving dock for this purpose.
- Open packages expeditiously to check the condition of the goods.
   There is only a 24 hour window to notify the carrier of any concealed damage.
- IMMEDIATELY REPORT ALL DAMAGE TO THE SHIPPING COMPANY! Then you may contact Morse for assistance with your freight claim.
- Morse Manufacturing will not be held responsible for any damaged freight that is not signed for as damaged.

Delivery to non-business addresses without a loading dock result in additional freight charges. Residential delivery fees, inside delivery fees, re-delivery charges, and lift gate services will be added by the truck line, and are non-negotiable.

### **Limited 2 Year Warranty**

Morse drum handling equipment is guaranteed against defects in workmanship or materials for **TWO YEARS** when used properly within its rated capacity. Warranty does not cover wear from normal use or damage from accident or abuse. Motors and other purchased parts carry the warranties of their manufacturers.



For warranty claims, contact your Morse Dealer to obtain a return authorization number, and for return freight advice. Return freight must be prepaid.

In all instances, liability is limited to the purchase price paid or to repairing or replacing the product. Customer assumes liability for any modifications, unauthorized repairs or parts substitution.

## **Safety Information**

While Morse Manufacturing Co. drum handling equipment is engineered for safety and efficiency, a high degree of responsibility must be placed upon the machine operator to follow safe practices, based primarily on common sense, upon which true safety depends.

Failure to follow the safety precautions in this manual can result in personal injury or property damage. Observe the same precautions as with similar machinery where carelessness in operating or maintenance is hazardous to personnel. Carefully read the safety precautions below and throughout this manual.

Review the Material Safety Data Sheet(s) for the material(s) in the drum(s) and take all necessary precautions. Safety shoes, work gloves, hard hat and other personal protective devices are recommended.

Prior to initial use, inspect all moving parts and test rotation of drum holder with a weighted drum. Do NOT raise drum holder without a load, as it may become stuck due to the tight seals in the cylinder. Inspect drum holder for proper operation. Perform necessary inspections, operator training, etc.



# Automated Tilt-To-Load Drum Tumblers Serial Number 315601 to Current



**DANGER** - Indicates a situation which, if not avoided, will result in serious injury or death. This signal word is limited to the most extreme situations.



WARNING - Indicates a situation which, if not avoided, could result in serious injury or death.



**CAUTION** - Indicates a situation which, if not avoided, can result in damage to the machine.

	DANGER - Watch Out for Pinch Points. Stay clear of moving parts. Do Not Stand Near any Part of a Rotating
	Drum or Drum Holder. Operator should remain directly in front of the control station while operating the rotator.
\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	Morse 311 Series Drum Rotators comply with OSHA when installed in accordance with OSHA subpart O, 1910.212
	- "General requirements for all machines." "Revolving drums, barrels, and containers shall be guarded by an
	enclosure which is interlocked with the drive mechanism, so that the barrel, drum, or container cannot revolve
	unless the guard enclosure is in place." A safety enclosure with interlock is included with each 311 model.
<u> </u>	WARNING - The 311 Series is designed to rotate a steel, plastic or fiber drum weighing up to 800 Lb. (363 kg),
<b>!</b> \	ranging from 18" to 23.5" (45.7 to 59.7 cm) in diameter and from 29" to 37" (74 to 94 cm) in height.
	DO NOT attempt to handle any other type of drum or object.
	DO NOT exceed the weight capacity of 800 Lb. (363 kg).
<u> </u>	WARNING - Level Floors Only. For operation only on clean, level floors of suitable bearing capacity. Do not use on
<b>!</b> \	sloped surfaces, ramps, irregular or debris strewn floors.
	enged carriage, megana a dashe dashi nesat
$\wedge$	WARNING - Properly Mount to Floor. Do Not put into service without proper floor mounting and leveling. Use the
<b>_:</b>	four mounting holes in each corner of the base to anchor to floor.
	WARNING D. NAMARE H. LIST H. L. LIST H. L. LIST H. M. L.
	WARNING - Do Not Modify the Unit. Under no circumstances should any modifications be made to the Morse
	machinery without factory authorization. Any modifications may void the warranty. This machine was designed to
	perform a specific job and alterations may result in injury to operator or machine.
<b>^</b>	WARNING - No Loose Fitting Clothing. Wear close-fitting clothing and safety equipment appropriate to the job.
	Loose fitting clothing may become caught on the machinery and cause severe personal injury.
	CAUTION - Wear safety shoes with non-slip soles and hard toe protection.
_	CALITION FOR NOT allow down to find a second of
	CAUTION - DO NOT allow drum to impact on floor, ground, etc.
	WARNING - Hydraulic Fluid Under Pressure Can Be Hazardous. Escaping hydraulic fluid under pressure can
<b>!</b> \	· · · · · · · · · · · · · · · · · · ·
	penetrate the skin, causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic
	lines. Keep hands and body away from pinholes and nozzles which eject fluid under high pressure. Use a piece of
	cardboard to search for leaks. If an accident occurs, see a doctor immediately and inform them of the nature of the
	accident.
	WARNING - This product can expose you to chemicals including barium sulfate, cobalt, titanium dioxide, and 2-
	methylimidazole, which are known to the State of California to cause cancer, and bisphenol-A, which is known to the State of
	California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov
L	



## Automated Tilt-To-Load Drum Tumblers Serial Number 315601 to Current

### **Machine Description**

The Morse 311 Series Automated Tilt-To-Load Drum Rotators are designed to receive an upright steel, plastic or fiber drum at floor level, hydraulically tilt up to clear the floor, and rotate the drum "corner-over-corner" between 5 and 20 RPM (4 to 16 RPM with 50Hz models). The maximum full drum capacity is 800 Lb. (363 kg). Capacity is derated to 400 Lb. (181 kg) for a half-full drum. Half-full Capacity is an indication of the capacity for tilting a bottom-heavy drum. A partially full drum with an unbalanced and shifting load is harder to tilt than a full drum.



#### **Drum Holder**

The drum holder is the component on the Automated Tilt-To-Load Drum Rotator that securely holds the drum for rotating. The drum holder features the web strap and ratchet mechanism for tightening the drum at the middle and two top clamps for holding the drum end-to-end.

#### **Installation** - Install reservoir breather BEFORE operation.

Automated Tilt-To-Load Rotators are shipped filled with hydraulic fluid (Dexron 3 or equivalent). The base has four holes spaced 36" (91.44 cm) wide x 59.5" (151.13 cm) long. Morse recommends the rotator be secured to the floor using 5/8" x 3" lag bolts. Install all Morse Rotators in accordance with OSHA requirements for enclosure and safety interlock, etc. Drum rotator must automatically turn off when enclosure door is opened (see enclosure instructions).

## START UP PROCEDURES

PUMP ROTATION IS CLOCKWISE VIEWING FROM THE MOTOR END. JOG THE MOTOR TO DETERMINE PROPER ROTATION. IN THE EVENT FLUID DOES NOT FLOW, CHECK MOTOR WIRING DIAGRAM FOR CLOCKWISE ROTATION.

### **Important**

Review the Material Safety Data Sheet(s) for the material(s) in the drum(s) and take all necessary precautions. Safety shoes, work gloves, hard hat and other personal protective devices are recommended.

Please read all instructions thoroughly before attempting to operate your new Morse drum handler.

When loading, unloading, operating, or maintaining your MORSE drum handler, always use care and good judgment. Maintain secure footing and a firm hold. Keep hands and loose clothing away from all moving parts. Never allow anyone to be below any part of a raised drum handler or drum. Read operating instructions and review the pictures in the sales brochure before operation.



# Automated Tilt-To-Load Drum Tumblers Serial Number 315601 to Current

## **Operating Instructions**

## Loading a Drum

- 1. With the drum holder in the lowered position, the bottom loading plate will be slightly above the floor. Swing the hinged ratchet plate clear of the drum opening. Loosen the top clamps to the full open position.
- 2. A variety of drum handling methods can be used to set the drum into the drum holder. Ensure that the drum is fully seated against the back of the drum holder.



Load drum with drum Ruck



3. Drape the web strap across the face of the drum, and thread through slot in ratchet. Operate ratchet to tighten strap around drum.



Load Drum with Holst attachment



4. Turn the top clamps until they tighten against top of drum. Then remove hand crank BEFORE rotating drum.




# Automated Tilt-To-Load Drum Tumblers Serial Number 315601 to Current

### **Operating Instructions Continued**

- 1. Close the enclosure gate and verify that the key on the door panel inserts properly into the interlock switch. If ket is not aligned properly, adjust accordingly.
- 2. Adjust the timer: using the small buttons on the timer, set the desired time of rotation to the nearest tenth of a minute.



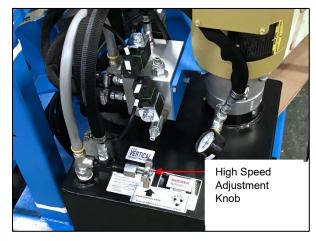

Control Panel

Hydraulic Manifold

- 3. Press the green "START" button to begin the cycle:
  - a. The drum holder will rise to the top position
  - b. The drum holder will start the slow speed rotation for about 5 seconds
  - c. The drum holder will rotate at the high speed setting (The high speed setting is adjusted using the silver handle on the top of the hydraulic reservoir see image above. If the silver knob is turned fully clockwise, the drum will rotate at full speed. As the silver knob is turned counterclockwise, the high speed setting is lowered.)
  - d. The drum holder will stop rotating after the preset time has been reached
  - e. The drum holder will lower back to the floor in the upright position.
- 4. If at any time the operator needs to stop the rotator, the red "EMERGENCY STOP" (E-STOP) or the red "STOP" button can be pressed, and the rotation will stop.
- a. If the E-STOP is pressed during a rotation cycle, the drum stops, the timer is reset, and the cycle is cancelled, requiring a full reset by deactivating the E-STOP (turn knob CW until it pops back out), press and hold the blue "RESET" button until the drum returns to the floor level. The timer will be reset to original timer setting.
- b. If the red "STOP" button is pressed during a rotation cycle, the drum and timer stop. You can start the cycle again by pressing the green "START" button and it continues where it left off. Alternately, after pressing the red "STOP" button, you can press the blue "RESET" to return it to the beginning of the cycle, which includes a timer reset.
- c. If the safety switch interrupts the process by opening the gate on a safety enclosure, follow procedure in step 4a above.



## Automated Tilt-To-Load Drum Tumblers Serial Number 315601 to Current

### **Unloading a Drum**

Ensure the drum is in upright position to unload.

- 1. Squeeze the ratchet release lever and open all the way to unlock, then release the tension on the strap. Allow enough slack in the strap in order to remove from ratchet.
- 2. Loosen top clamps and swing clear or drum.
- 3. Remove drum with appropriate drum handling equipment.

#### **Preventative Maintenance**

Periodic inspection for the general condition of structural and mechanical components is imperative for safe and efficient operation.

#### Monthly

Inspect the hydraulic system for oil drips, hose damage, or other signs of wear. Inspect the level and condition of the hydraulic fluid. Hydraulic fluid level should be within a ½" of the top of the reservoir when the cylinder is in the retracted position. Replace any parts that show signs of wear.

Inspect all moving parts, framework, ratchet, web strap, fasteners and contact areas for signs of wear, fatigue, or loosening. The web strap should be removed from service and replaced if any of the following are visible:

- Acid or caustic damage
- · Melting or charring of any part of the strap
- Holes, tears, cuts, snags or embedded articles
- · Broken or worn stitching in load bearing splices
- · Excessive abrasive wear

#### Every 6 to 12 Months in Ordinary Environment (monthly in dirty conditions)

Lubricate all moving parts.

Pillow Block Bearings. See Bearing Lubrication Sheet for grease types and fill amounts at:

https://morsedrum.com/ops/2654-P\_bearing-grease.pdf

Drive chain: Grease with multiservice lubricant such as

Whitmore's Surtac® 2000 HD shown at:

https://morsedrum.com/ops/MSDS Surtac 2000.pdf

Clamp Screws: Grease every 6-12 months with multiservice lubricant e.g. Whitmore's Surtac® 2000 HD shown at:

https://morsedrum.com/ops/MSDS\_Surtac\_2000.pdf


#### Yearly

Hydraulic Pump: Change oil with 6 gallons of ATF Dexron III or equivalent. For more oil information, see maintenance information of Hydraulic Pump Sheet at:

https://morsedrum.com/ops/PLM404-310-P.PDF



# Automated Tilt-To-Load Drum Tumblers Serial Number 315601 to Current

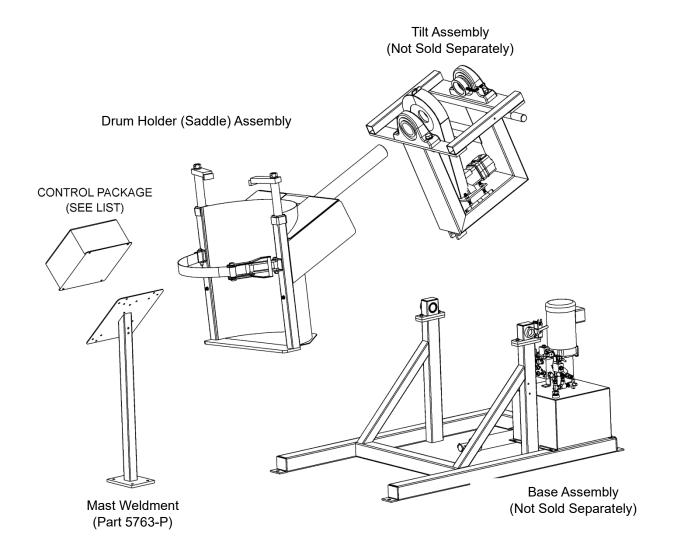

Drum Tumbler Model Number	Motor	Control Package
311-1-115	3186-1-P	CP-311-1-115
311-1-230	3186-1-P	CP-311-1-230
311-3-230	3186-3-P	CP-311-3-230
311-3-460	3186-3-P	CP-311-3-460
311-3-575	3186-575-P	CP-311-3-575
311-1-220-50	3186-1-50-P	CP-311-1-220-50
311-3-230-50	3186-3-50-P	CP-311-3-230-50
311-3-400-50	3186-3-50-P	CP-311-3-400-50